Hydraulic Control Valve Body

Matthew Whitten Brookhaven College

AOD Transmission

- ☐ What pressures control the shift timing and feel.
 - Governor Pressure
 - Throttle Pressure

Governor Pressure

- ☐ What is governor pressure?
 - "The transmission's pressure that is directly related to output shaft speed. Used to control shift points."
 - Hydraulic pressure that is directly proportional to the speed of the vehicle.

Tomorrows technician pp. 211-214

Types of governors


- ☐ Gear driven with spool valve
- Gear driven with check balls
- Shaft mounted
- □ Note: Line pressure from the manual valve must be regulated down.

Tomorrows technician pp. 211-214

Gear driven w/ check balls


- Uses only port for governing pressure
- Hydraulic pressure is dumped to the sump past check balls.
- □ As speed increases the weights fly out forcing the check balls to close off the dump.
 - The weights reach around the governor body to the ball on the opposite side.

Tomorrows technician pp. 211-214

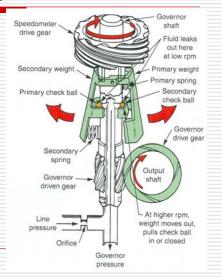

Gear driven w/ spool valve


- Uses pressure inlet line, dump and governor outlet ports.
- When not spinning the fluid pressure pushes up on the spool valve opening the dump port.
- ☐ The faster it spins the more force the weights push down on the spool valve blocking off the dump port.

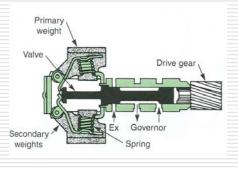

Tomorrows technician pp. 211-214

Shaft mounted

- Not gear driven, mounted directly to the output shaft.
- Almost exclusively used on rear wheel drive transmissions
- ☐ Fluid pressure is forced into a spring loaded cap.
- At low speeds fluid pressure is dumped, the faster the shaft spins the more force the cap excerpts on the fluid and spring. This blocks off the fluid dump.

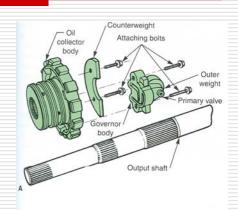


Tomorrows technician pp. 211-214

Throttle pressure

- □ Types of throttle pressures:
 - T.V. Pressure (throttle valve)
 - Vacuum modulator
 - Kick-down/Detent valve


T.V. pressure

- ☐ Constantly acted upon by the accelerator pedal
- ☐ As accelerator pedal increases input the higher the T.V. Pressure.
- ☐ Uses:
 - May be only engine load input.
 - May be used with vacuum modulator valve.
 - May include some component of a Detent valve.

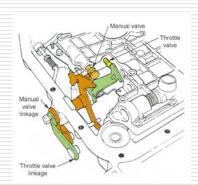

Vacuum Modulator

- ☐ Used to give load of engine signal to transmission.
- Uses manifold vacuum.
- ☐ High vacuum = low engine load.
- □ Low vacuum = high engine load.
- Uses:
 - Must be used with kick down or T.V.

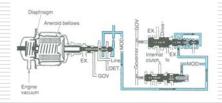

Kick-down/Detent Valve

- □ Simply provides the transmission with a throttle input which would require a downshift.
- Only activated with close to or at WOT.
- □ Uses:
 - May be integrated into T.V. operation
 - May be independent of T.V. operation

What happens when we ...

- □ Vehicle stopped in Drive ?
 - Governor: Minimum pressure, does not rise
 - Throttle pressure: Minimum pressure, does not rise
- □ Vehicle stops accelerating?
 - Governor:
 - Throttle pressure:
- □ Slowing to a stop?
 - Governor:
 - Throttle pressure:

What happens when we ...

- ☐ Slowing to a stop?
 - Governor:
 - Throttle pressure:
- Vehicle is cruising at steady speed light throttle input?
 - Governor:
 - Throttle pressure:

What happens when we have a problem?

- ☐ Governor pressure never increases from minimum?
 - Concern:
- ☐ Governor pressure is always at maximum?
 - Concern:

What happens when we have a problem?

- ☐ Throttle pressure never increases from minimum?
 - Concern:
- ☐ Throttle pressure is always at maximum?
 - Concern: